

InRoads

Defining Slopes along Template Segments

Did you know that by default, the slopes of template segments are calculated from pivot to range when using the Superelevation command? If the pivot is on the range point, a zero-percent slope is reported. To prevent this, define the crown point on the template and then the slope will be calculated from the crown point to the range.